Assembly Instructions
Nia Collection Pendant # PXS266

WARNING: BE SURE TO SHUT OFF POWER AT THE MAIN FUSE OR CIRCUIT BREAKER BOX BEFORE INSTALLING OR SERVICING THIS FIXTURE.

NOTE: 1. Before installing, consult local electrical codes for wiring and grounding requirements.
2. Read and save these instructions.

Contents of Spare Parts:

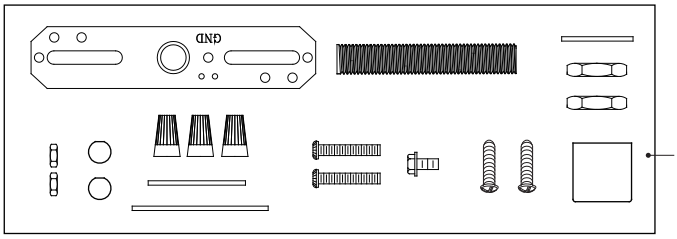

1. Thread two screws to the mounting strap, and secure them with two lock nuts. Adjust the length of the screws if necessary.
2. Attach the mounting strap to outlet box by using two mounting screws.
3. Three rods with the length of 9 1/2 " L (x3), are attached in the hardware package, choose the desired installation height you need. Then thread the fixture wires through the rods and threaded pipes(-a) as shown in the right graph.
   The height can be adjustable to 22-1/2 " , 32" or 41-1/2 " by using the rods.
4. Screw all rods together until securely by using the threaded pipes(-a), then secure the rod assembly to the stem of the coupling.
5. Pull out the outlet wires and the house grounding wire from the outlet box. Make wire connections using the wire nuts:
   ---The black wire from fixture to the black wire from power source.
   ---The white wire from fixture to the white wire from power source.
   ---Attach the fixture grounding wire to the mounting strap with the green grounding screw. Then connect it to the house grounding wire with the wire nut.
   Carefully put the wires back into the outlet box.
6. Attach the canopy kit to the mounting strap by inserting the screws, and secure it with two ball nuts.
7. Install bulbs (not included). See relamping label at socket area or packaging for maximum allowed wattage.
8. Secure the threaded pipe(-b) into the coupling, then secure it with a washer ant hex nut.
9. Slip the small metal pad, acrylic pad and big metal pad through the threaded pipe(-b) until the acrylic pad checks with the bottom of the shade by adjusted hex nut, secure them with the finial.
   Note: Remove the cover from the acrylic before placing it to the shade.
10. Turn on the power at the main fuse or circuit breaker box.

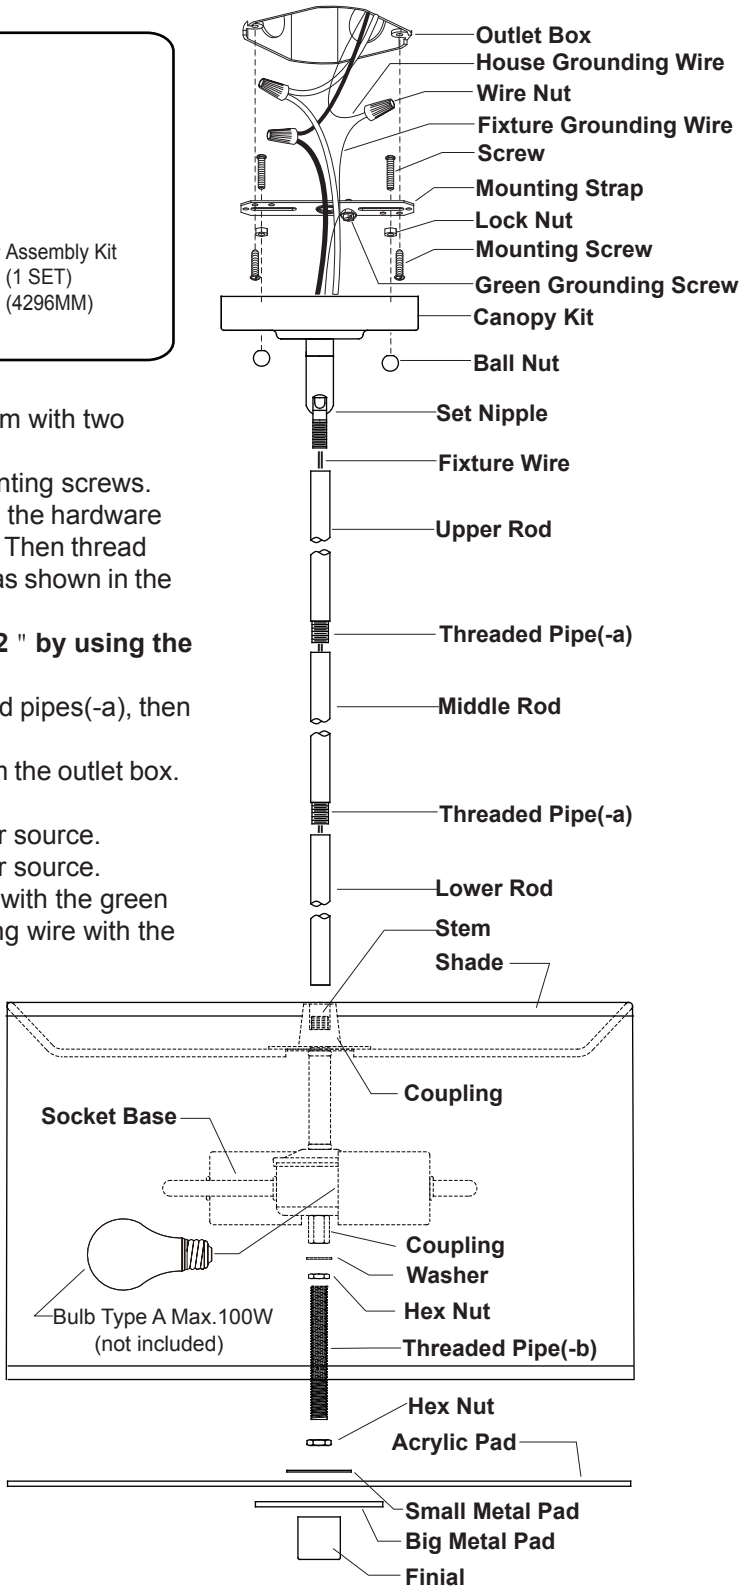

How to Replace the Shade:

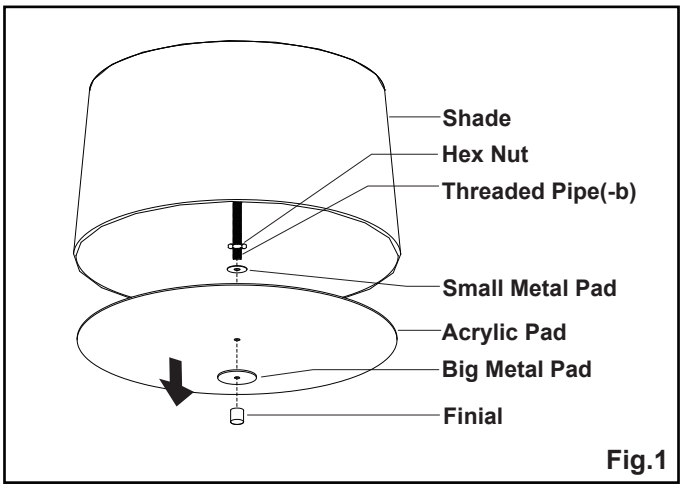

Fig.1

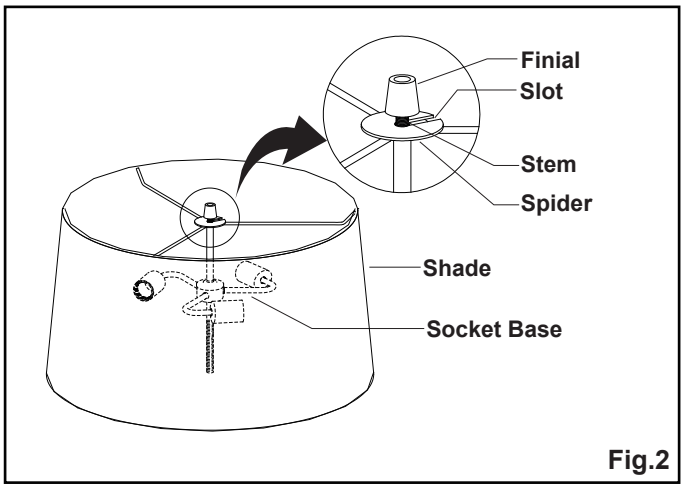

Fig.2

1. Unscrew the finial from the threaded pipe(-b) and remove the big metal pad, acrylic pad and small metal pad from the shade. (See Fig.1)
2. Unscrew the finial up 2 to 3 turns, remove the old shade from the socket base by sliding the stem away from the slot in the spider of the shade. (See Fig.2)
3. Take a new shade and install it to the socket base by locating the slot in the spider to the stem, then secure it with finial. (See Fig.2)
4. Restore the small metal pad, acrylic pad and big metal pad back to the threaded pipe(-b) and secure them with finial. (See Fig.1)